

INTELLIGENT TOUCHSCREEN CONTROL - UHB WIRING CENTRE (V1-UFH) TOUCH V2 (LOW TEMP. SYSTEM)

NOTES TO ELECTRICIAN:
NOTE 1 - LIVE LINK CONNECTIONS
 All links shown between 'L' and 'A1/B1/COM' terminals must be fitted as shown and labelled accordingly.

NOTE 2 - OPTIONAL UFH ZONE VALVE
 These connections are for opening a zone valve serving the UFH manifold. As our system does not require a zone valve on the UFH circuit, the 'Gr' and 'Or' terminals must be linked out as shown.

NOTE 3 - MANIFOLD ACTUATORS
 The manifold actuators come pre-fitted with a 2 core cable. These must be connected as shown. A maximum of 4 actuators can be connected to each zone output (i.e. maximum 2 cores per 'L' and 'N' terminal)

NOTE 4 - TOUCH THERMOSTATS WITH REMOTE AIR SENSOR
 The TOUCH thermostat must be connected to the UHB wiring centre with a 3 core (S, earth) cable. The 3 core (S, earth) cable is to be used for the 'L', 'N' and 'A2' to 'SL' connections as shown (N.B. The earth core is not used). The TOUCH thermostat must be connected to the remote probe, as shown, with a 2 core cable. The probe is pre-fitted with a length of 2 core cable. The remote probe is not polar specific and must be connected into the 'L' and 'RT1' terminals in the TOUCH thermostat. If required this can be extended using a small junction box - continuity across the connections must be maintained. The probe will be installed inside a blank sensor case. The TOUCH thermostat must be set to 'Floor Sensor Only' in 'Optional Setting' menu (feature 'OS' must be set to '02'). Please refer to user manual for more details.

NOTE 5 - BOILER CONNECTIONS
 The connections used for a heat demand for the boiler/primary plant system are shown as volt free. All connections at the boiler/primary plant must be made in accordance with the manufacturer's instructions.





NOTE 6 - COMMON POWER SUPPLY
 The mains power to the UHB wiring centre must be supplied from a common 5 amp fused spur which will supply all heating circuits. This will provide a single point of isolation.

NOTE 7 - ZONE 8 SWITCH
 The zone 8 slide switch inside the UHB wiring centre must be set to 'UFH'. This allows the 'ZONE 8 THERMOSTAT' connections to enable the 'UFH VALVE', 'UFH PUMP' and 'BOILER' outputs if a switched live demand is received from the thermostat connected into zone 8.

NOTE 8 - 230V OUTPUT FOR UFH PUMP
 These connections are to be used to fire the circulating pump supplying the underfloor heating circuits. If required this signal can be taken through an auxiliary contact at the primary plant - this will allow the primary plant system to override whether the underfloor heating system can draw heat or not.

IF YOU HAVE ANY QUERIES REGARDING THE INSTALLATION, PLEASE DO NOT HESITATE TO CONTACT OUR OFFICE.

CABLES REQUIRED FOR INSTALLATION:

-  230V 1.5mm² 3 CORE & EARTH (earth core not used)
-  230V 1.5mm² 2 CORE & EARTH
-  230V 1.5mm² 2 CORE & EARTH (earth core not used)
-  230V 1.5mm² 2 CORE & EARTH (earth & brown cores not used)
-  230V 1.5mm² 2 CORE & EARTH (earth & blue cores not used)

PRE-FITTED CABLES:
 The manifold actuators and zone valves come with pre-fitted cables. If these cables have to be extended, please ensure that continuity is maintained across all colour coded connections.

ALL MAINS VOLTAGE COMPONENTS, CONNECTIONS AND WIRING MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN.

THE INSTALLATION MUST BE COMPLIANT WITH CURRENT REGULATIONS, BS 7671 & IEC 60364.

